



Audio Emcee Digital Programming Guide

Programming the Audio Emcee Digital

1. Insert the USB flash drive (**FIG 1**) into a computer with Internet access with Windows 7, 2000, XP or Vista. If the software (**FIG 2**) does not auto run, click on My Computer, locate the USB drive, open up and run MOHConsole.exe which is stored on the USB drive.




2. All messages available will be located on the top left-hand portion of the screen in the box labeled as AVAILABLE MESSAGES. (**FIG 2**)

3. Highlight the message you want and then select the ADD MESSAGE button. The message you selected will then appear in the lower left-hand portion of the screen in the box labeled as PLAYLIST. Repeat this process to add more messages. (**FIG 2**)

4. To change the current order that the messages will play, select the message, then select the MOVE UP or MOVE DOWN buttons. To delete a message in the playlist, select the message, then select the DELETE button. (**FIG 2**)

5. When you have selected all the messages you want to play, and in the order you want them, you need to **X (FIG 3) out of the software** in order to save the playlist. *If you do not complete this step your playlist will not be saved.* You will also need to eject the USB drive properly from the computer. Simply unplugging the USB drive from the computer can cause the playlist to not be saved properly.

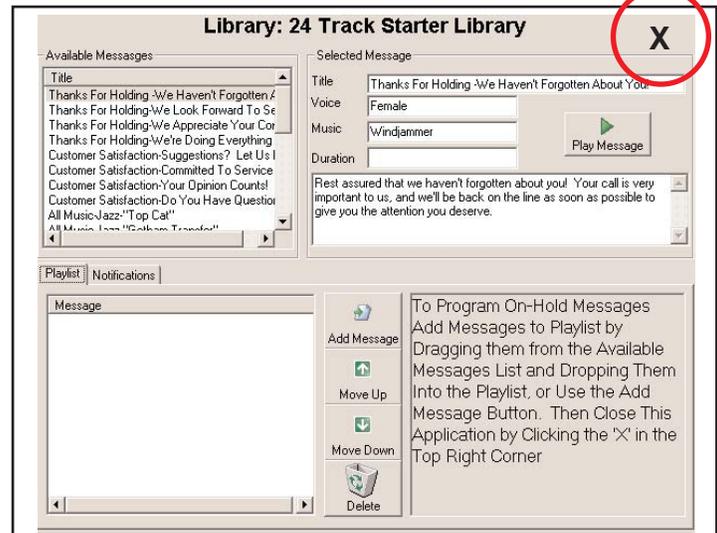

(Audio Emcee Digital programming software) **FIG 2**

6. Please make sure that the Audio Emcee Digital player is turned off. Insert the USB flash drive into the port on the back of your player. (**FIG 4**) Turn on the player. *This is the only way that the player will read the USB flash drive.*



7. **FIG 5** shows what your Audio Emcee Digital player should look like when running correctly.


Listen to your messages

Simply select the message, then push the PLAY MESSAGE button and you will hear this message play back through the speakers on your PC.

New Messages

Info-Hold utilizes a Message Library method for recording new messages. Whenever new messages are produced, they are recorded and added to your current library of messages. Info-Hold will send you an e-mail when new messages are available for programming.

Simply insert the USB flash drive into a computer with Internet access to program your new messages. The USB flash drive and software give you access to each and every message that Info-Hold has produced for you.

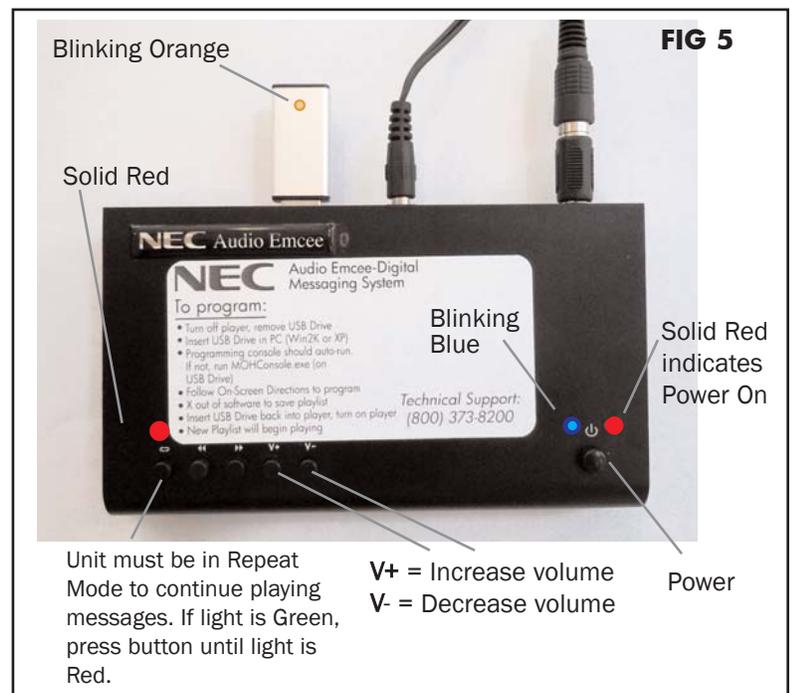

For further assistance, contact Info-Hold at 1-800-373-8200