



# MP-3000 M Installation Guide

1. The MP3000 M is preloaded with the programming software and pre-programmed with several of the 24 starter messages. If you would like to make any programming changes, please refer to the Programming Guide. Please give the enclosed Certificate [FIG 2] along with the Programming Guide to the person who has signed the Certificate for their records.



FIG 2

2. Locate the included MOH cord (Qty 1) [FIG 3]



FIG 3

3. Insert one end of the MOH cord into the MOH port located on the phone system. [FIG 3] If you can not locate the MOH port on your telephone system, please contact your telephone vendor for location.

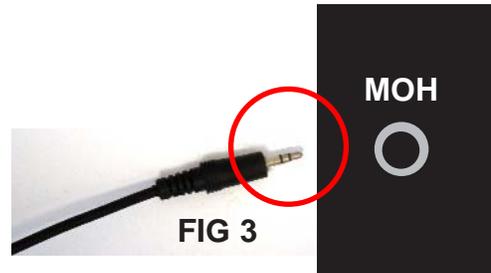


FIG 3

4. Insert the other end of the MOH cord into either the 8Ω or 600Ω output jack located on the back of the MP-3000 M player until it clicks in place. Depending upon the required impedance, use either the 8Ω or 600Ω output RCA jack, *not both*. [FIG 4]

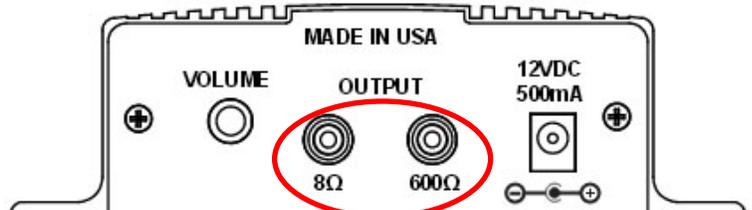


FIG 4

Please note the contents included with your MP-3000 M on-hold player shipment. [FIG 1]



FIG 1 - Contents of MP-3000 M Install Package

5. Locate the power cord included with your MP-3000 M package. [ FIG 5]



FIG 5

6. Insert the power cord into the Power jack located on the back of the MP-3000 M player. [FIG 6] Plug the power cord into your local power source (this could be a power strip or outlet).

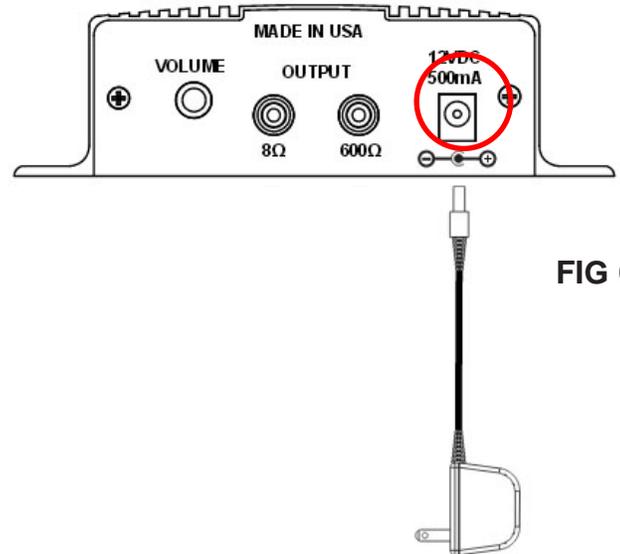


FIG 6

7. Once the system is installed, you will need to refer to the included **MP-3000 M Programming Guide** to program the on-hold messages.

*If you plug the USB drive into the unit without first programming it, the screen on the unit will read “No File.”*

8. FIG 7 shows what your MP-3000 M should look like when running correctly.

There is no Power button on the unit. It automatically turns on when you plug in the unit with the power cord.

FIG 7

